





## Stainless J Shape Bypass Barn Door Hardware Installation Instructions

**Note:** If you encounter any problems with the package and/or the following installation, please email us at [info@doubledw.com](mailto:info@doubledw.com) and include your order id.

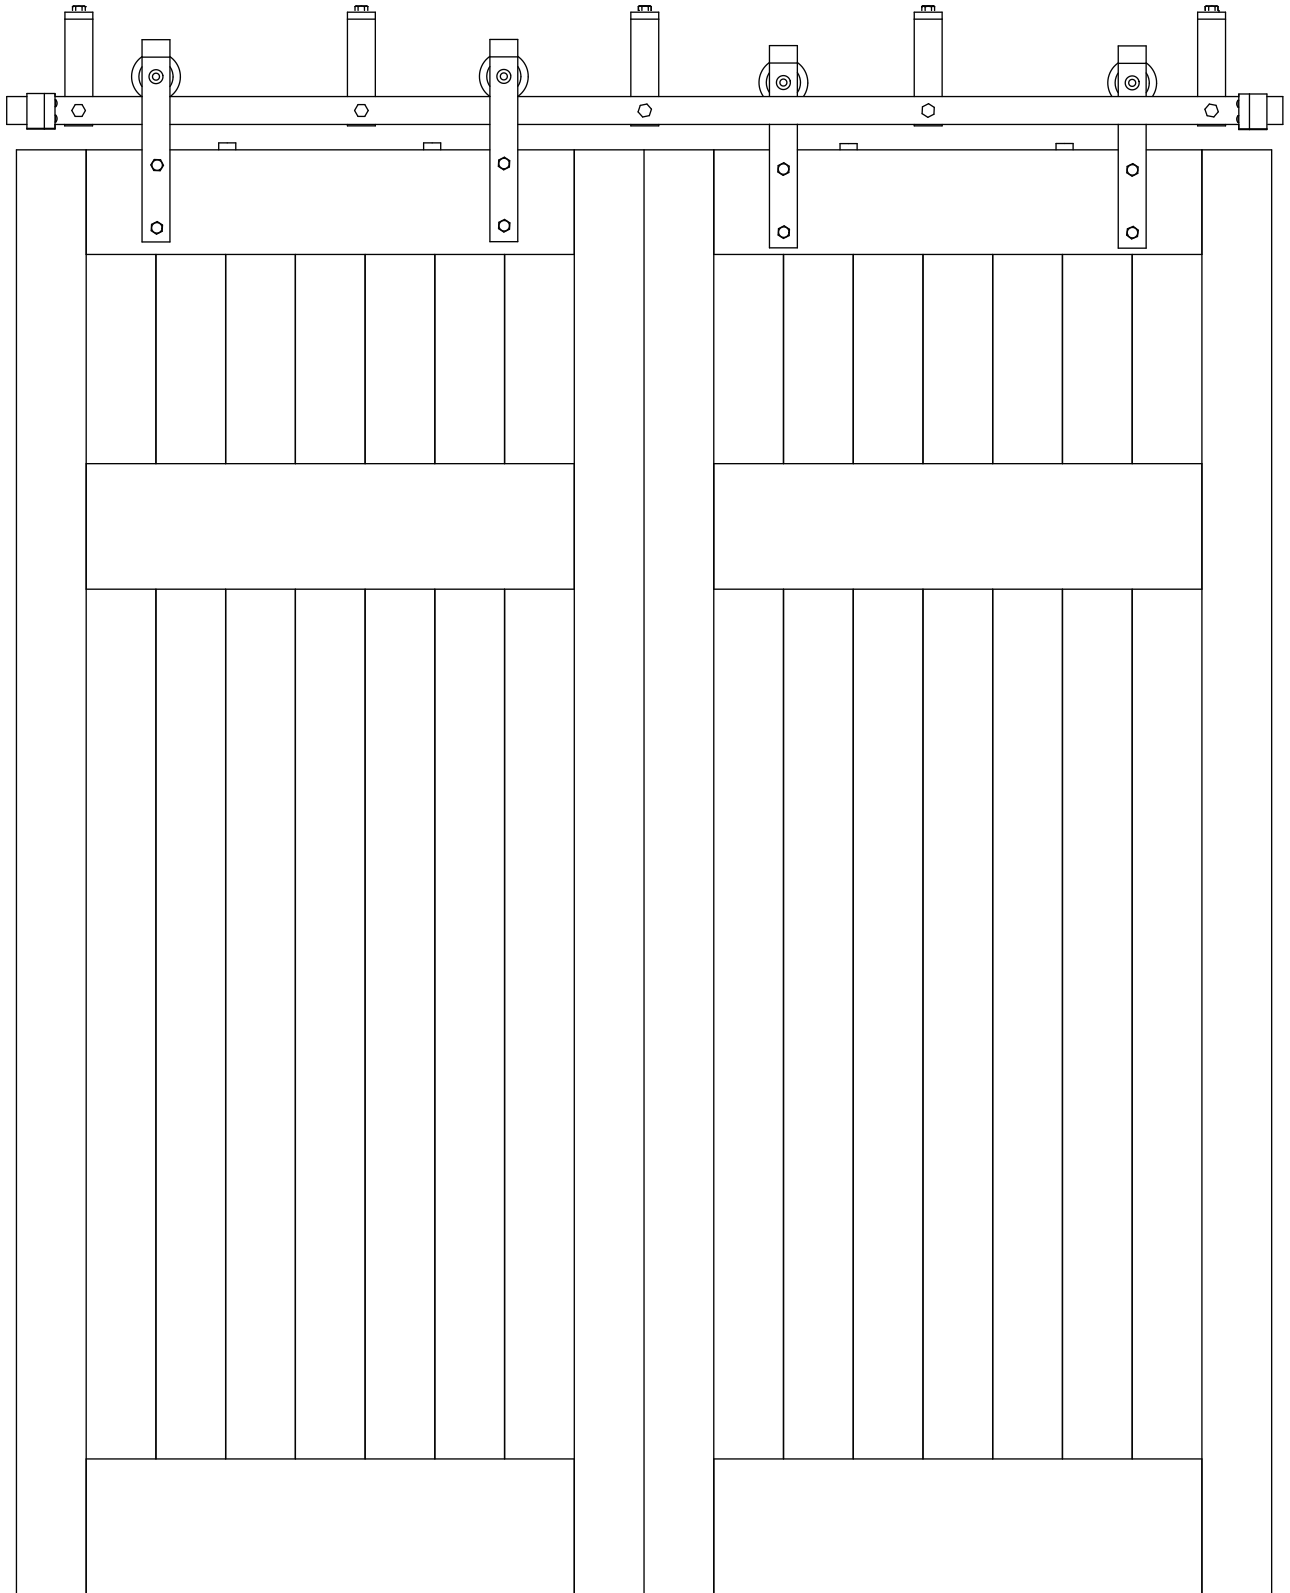


TRACK ACCESSORIES


Steel Hanger

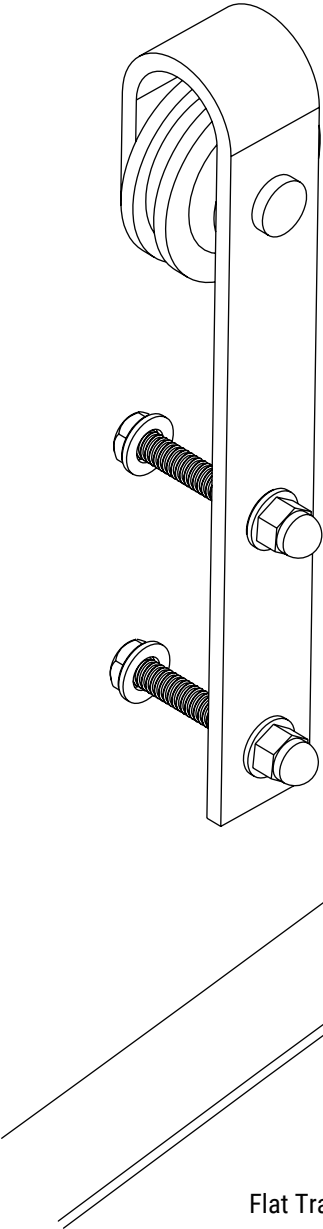


Anti-jump Pad

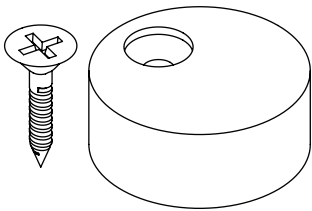


Spacer

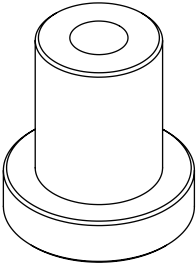


Lag Bolt

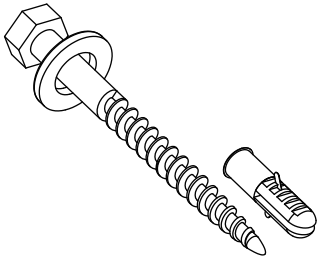


Door Stopper

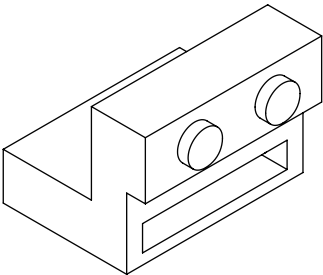


Junction Plate

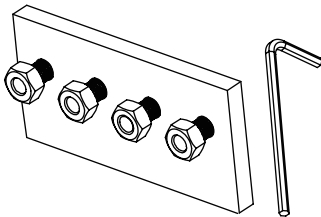


Bypass Bracket Suit

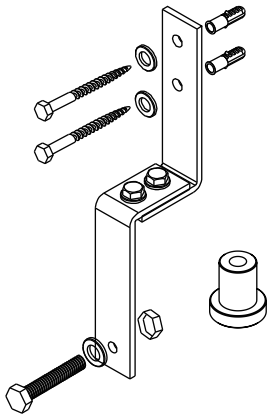


INSTALLATION TOOLS

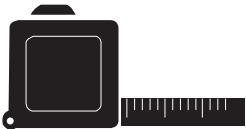

Ruler

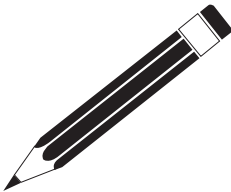

Pencil

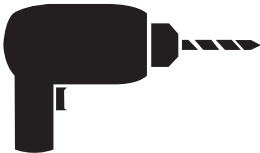

Drill



Level




Ratchet



Wrench


### Step 1: Hardware Installation

- Drill 7/16" holes at the distances from the top of the doors shown in the above chart.  
**Note:** The Hanger Bolts are inserted through the back of the door (i.e. the Hanger and Acorn Nuts attach to the front face of the door).
- Attach Hangers with the Hanger Bolts, Washers and Acorn Nuts as shown below.

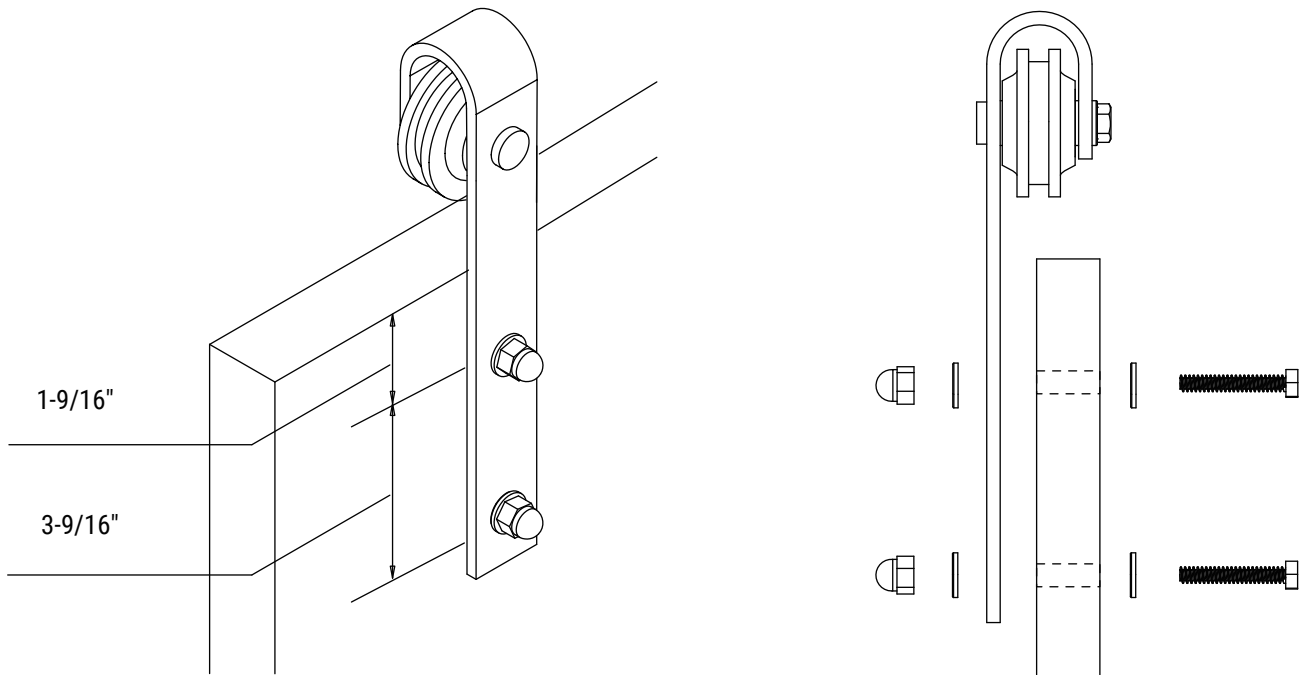


### Step 2: Install Anti-Jump Pads

- As shown in the illustration, the screw is near the front edge of your door (recommended: drill pilot hole to avoid splitting). Do not over tighten.

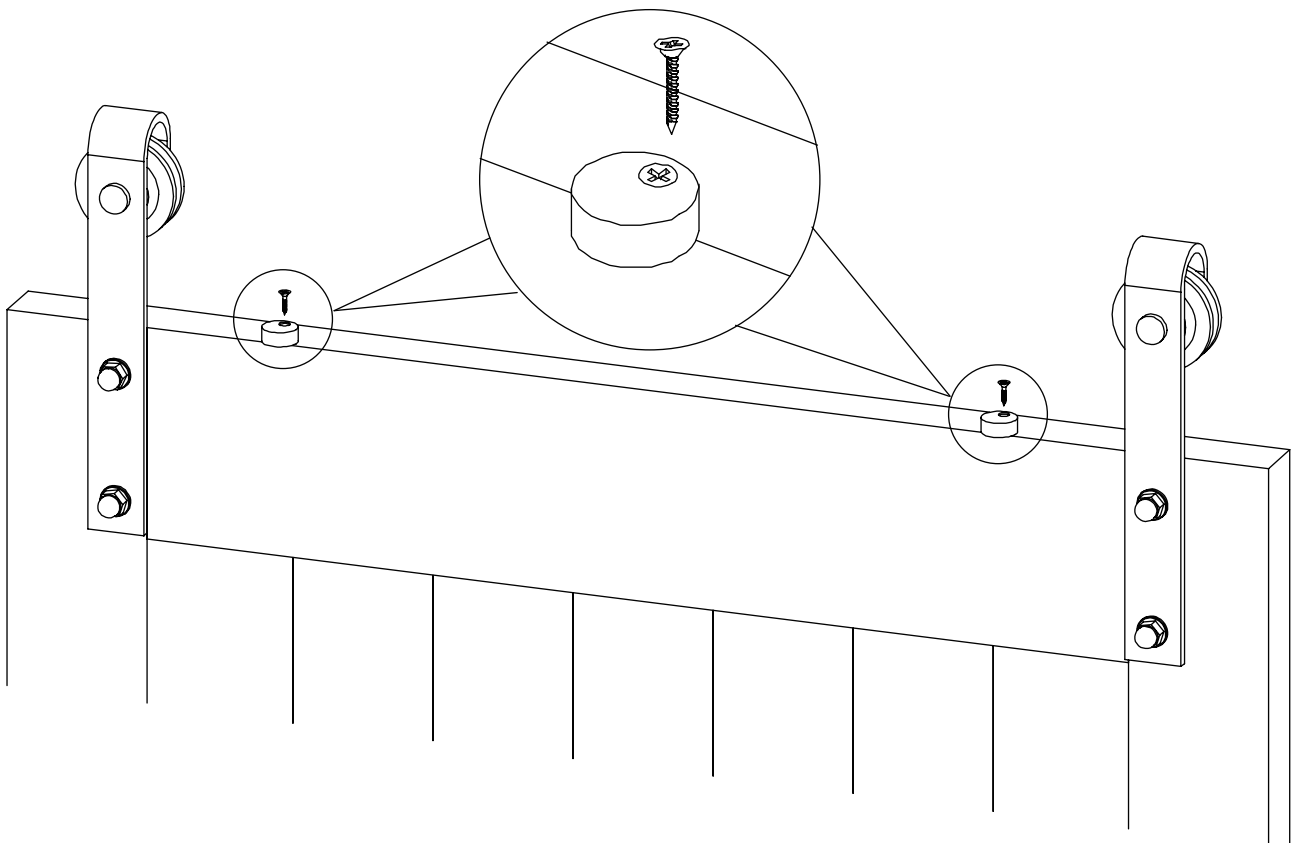


### Step 3: Connect Tracks and Install Door Stoppers

- Connect your tracks with junction plates if needed.
- Loosely install the Door Stoppers near each end of the track (final positioning will be determined at the end of Step 8).

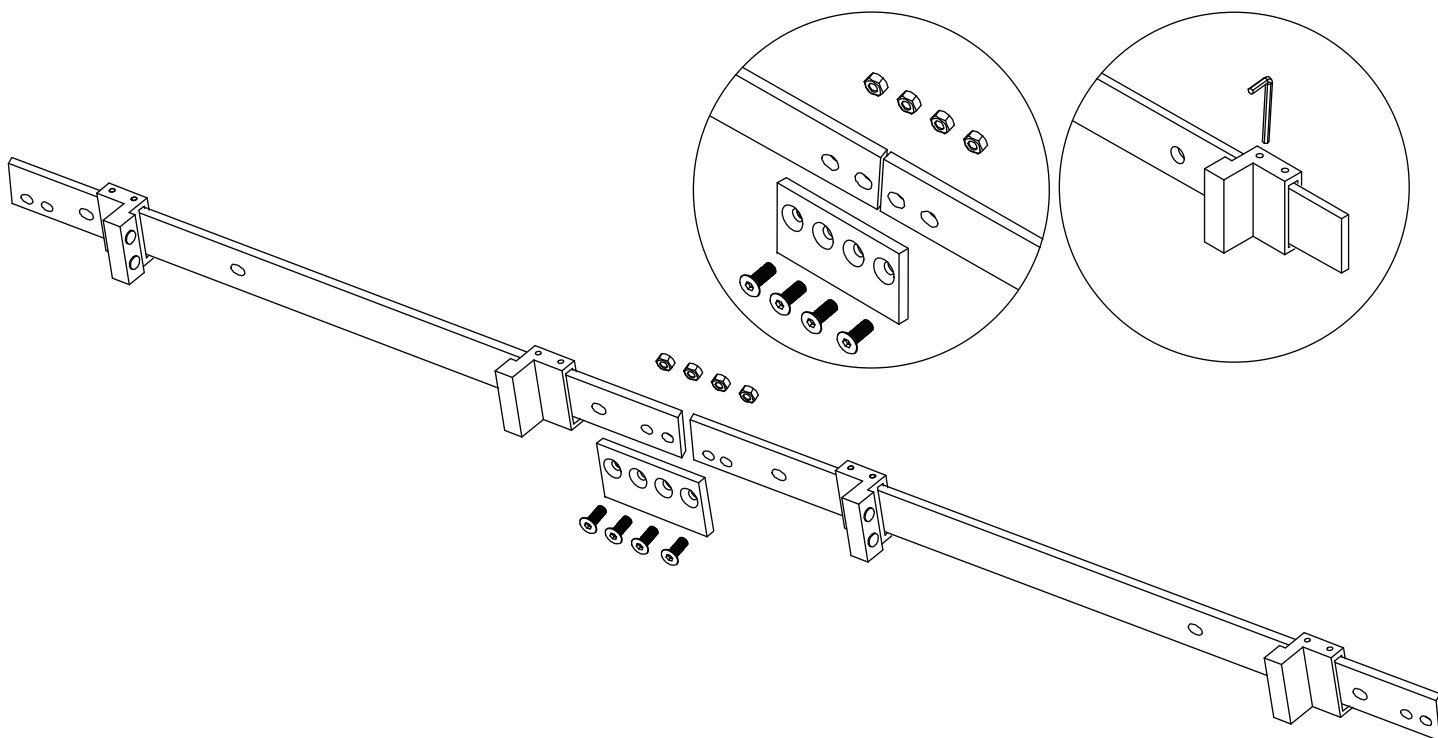

### Step 4: Draw Line for the Track

- Using a level, draw line ① for the Track, at the door height + 1-3/4" above the floor.
- Pencil lines ② and ③ for the Bracket above line ① as shown in the illustrations below.

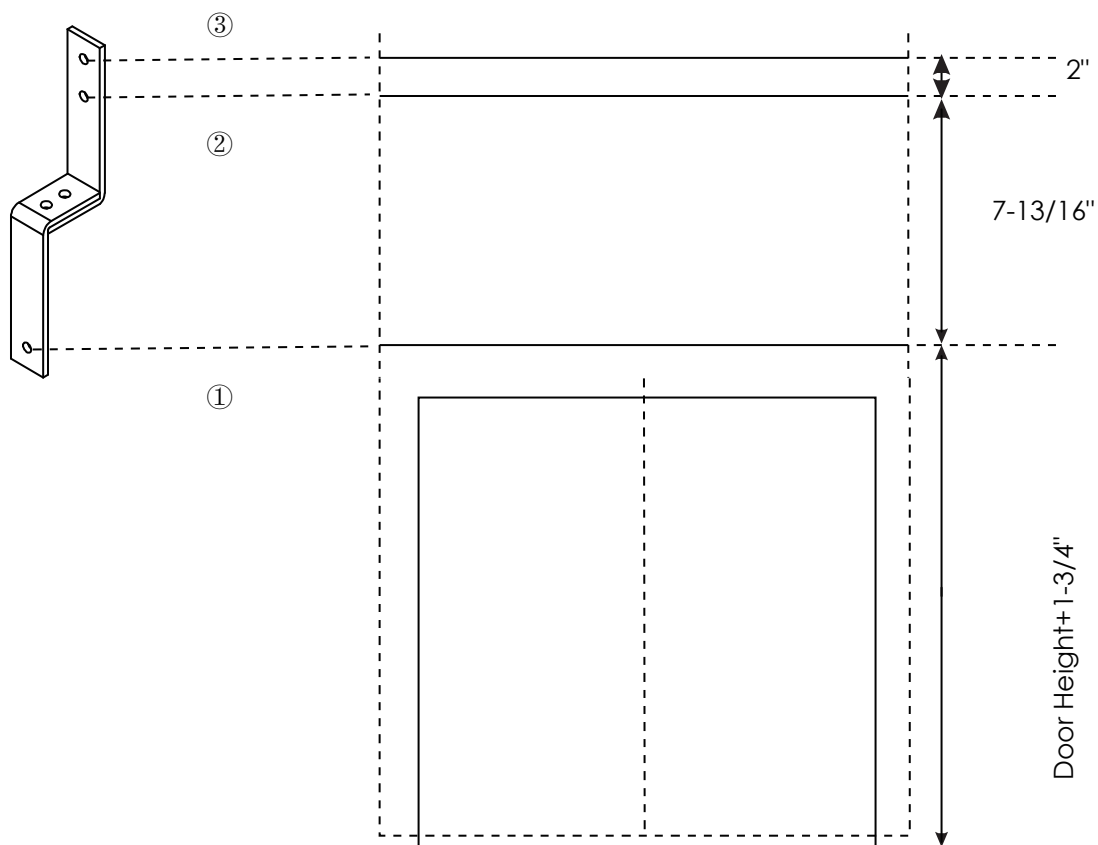


## Step 5: Mark and Drill Track Holes

- Line up the Track on the line and mark the location of the holes.

**Note:** Holes are 16" apart, line up with wall studs if possible. Concrete wall: Drill holes by using a 3/8" concrete drill bit.


Wood framed wall: Drill out the holes by using a drill with 1/4" drill bit.

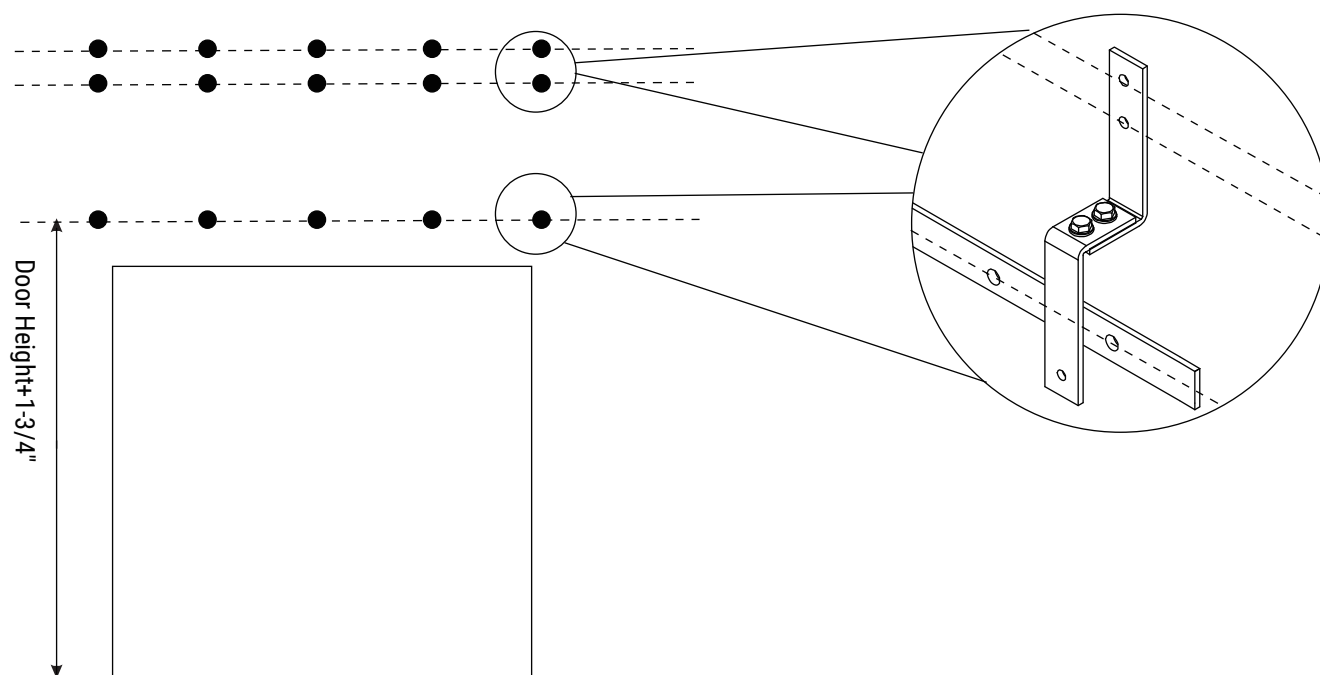

## Step 6: Install Track

- Using the Spacers, Long Lag Screws, and Washers (and hollow wall anchor if necessary), attach the Track to the wall as shown in the illustration below.


**Tip:** Loosely attach one end of the Track with the other end resting on the ground. Then swing track up and attach other end.

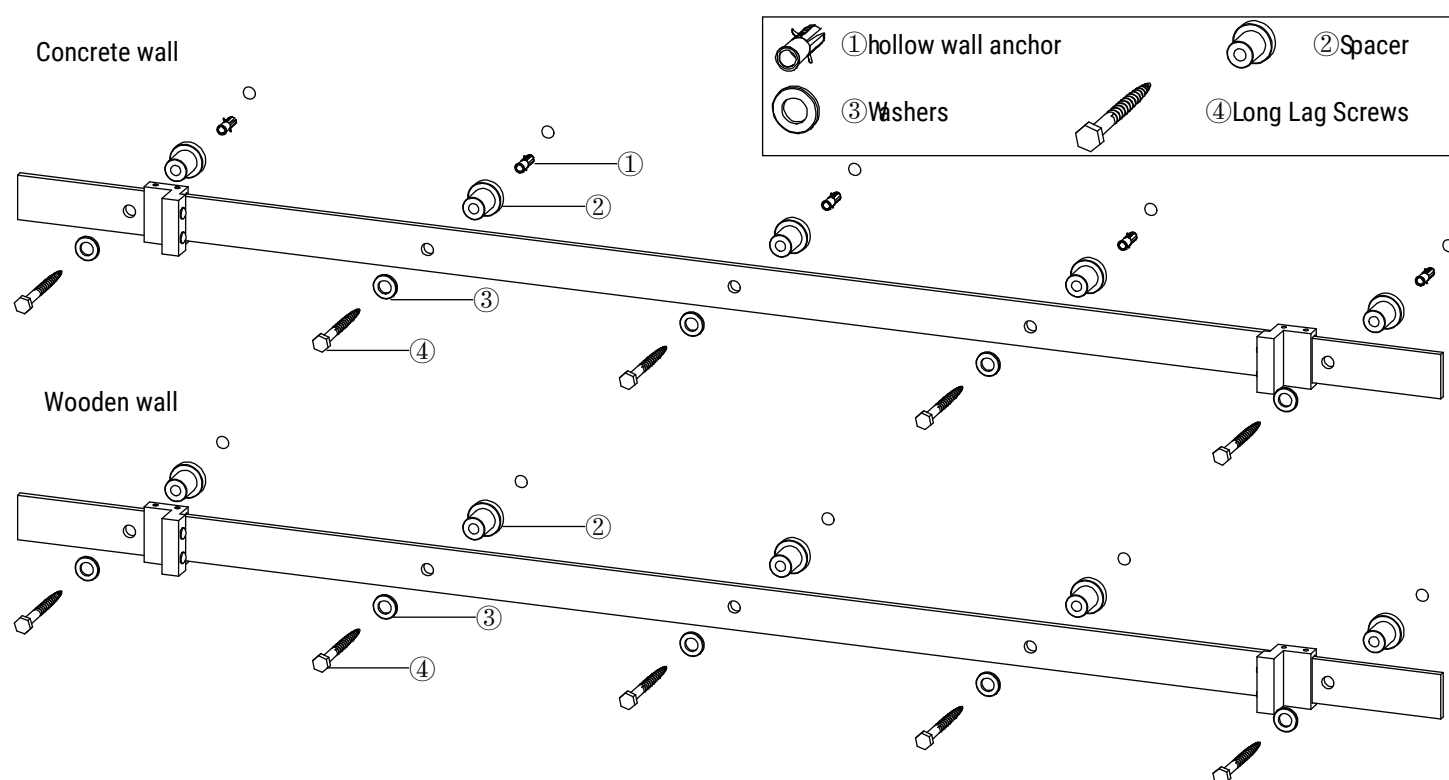

### Step 7: Attach Brackets to the Wall


- Using the Spacers, Long Lag Screws, and Washers (and hollow wall anchor if necessary), attach the Track to the wall as shown in the illustration below.

**Tip:** Loosely attach one end of the Track with the other end resting on the ground. Then swing track up and attach other end.

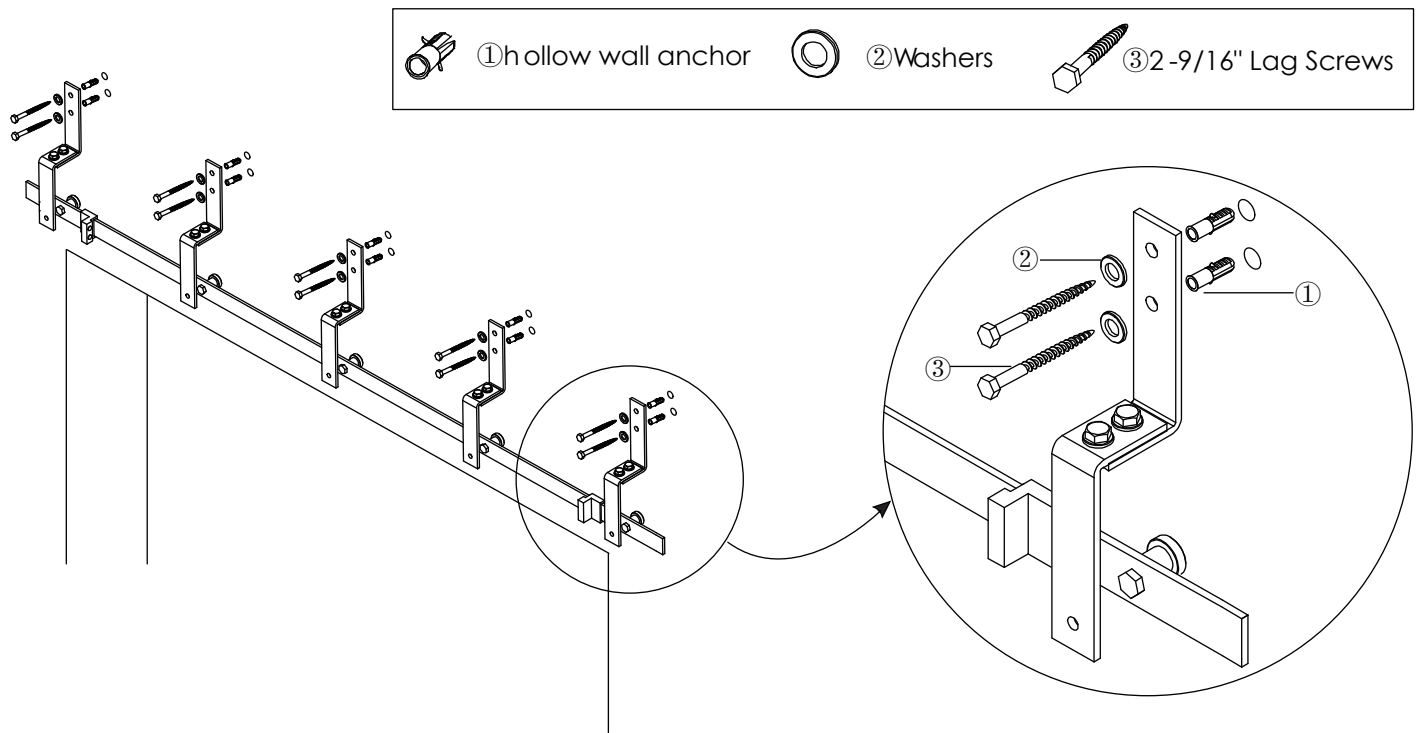


### Step 8: Install the Outside Track

- Using the spacers, Track Bolts, Washers and Nuts attach the outside Track to the Bypass Bracket as shown in the illustrations below.

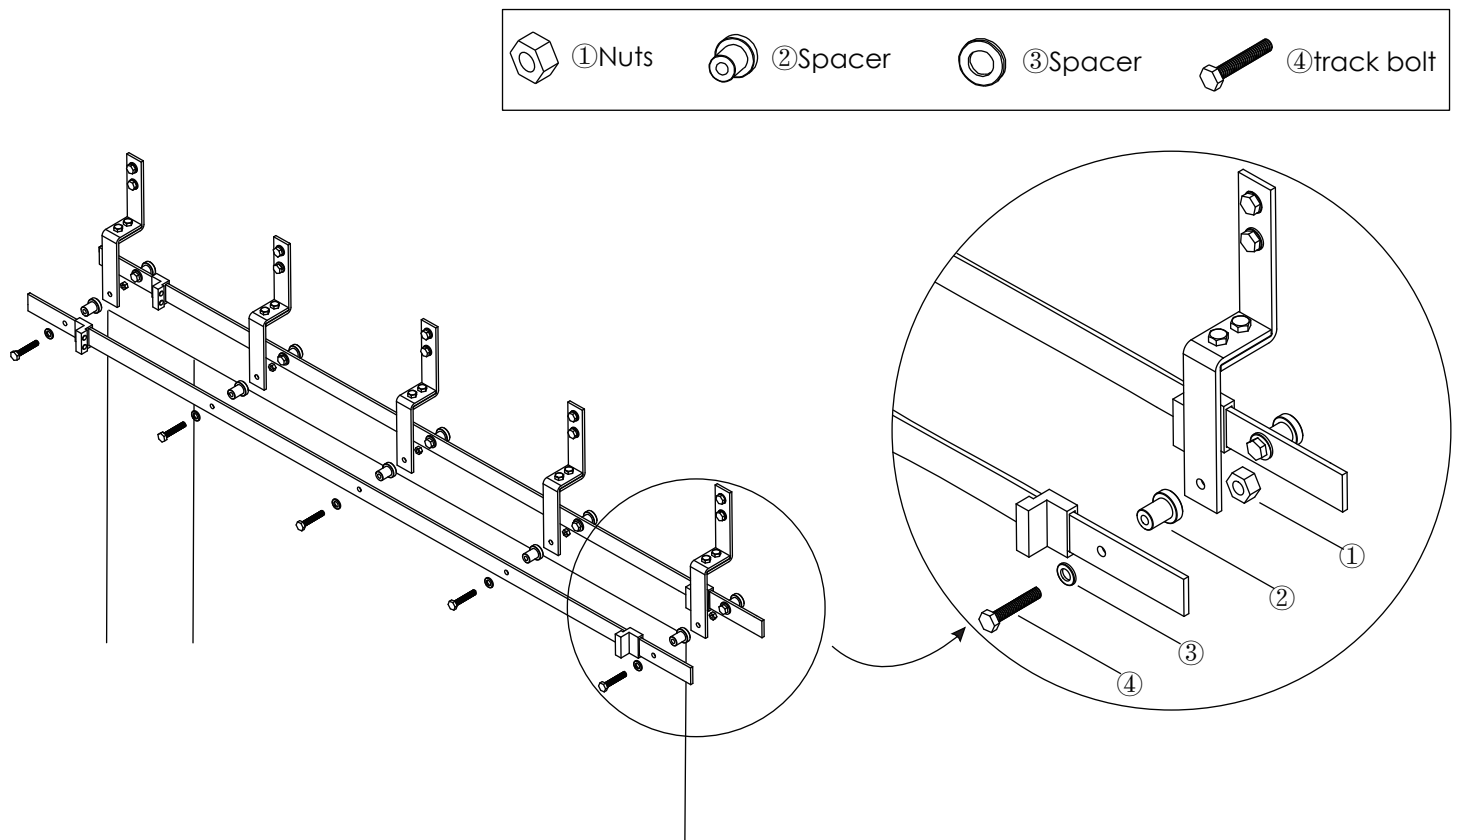


### Step 9: Install Doors

- Hang your Steel Hangers on the Track, and then twist the Anti-Jump Pad toward to the wall so that it is under the Track.

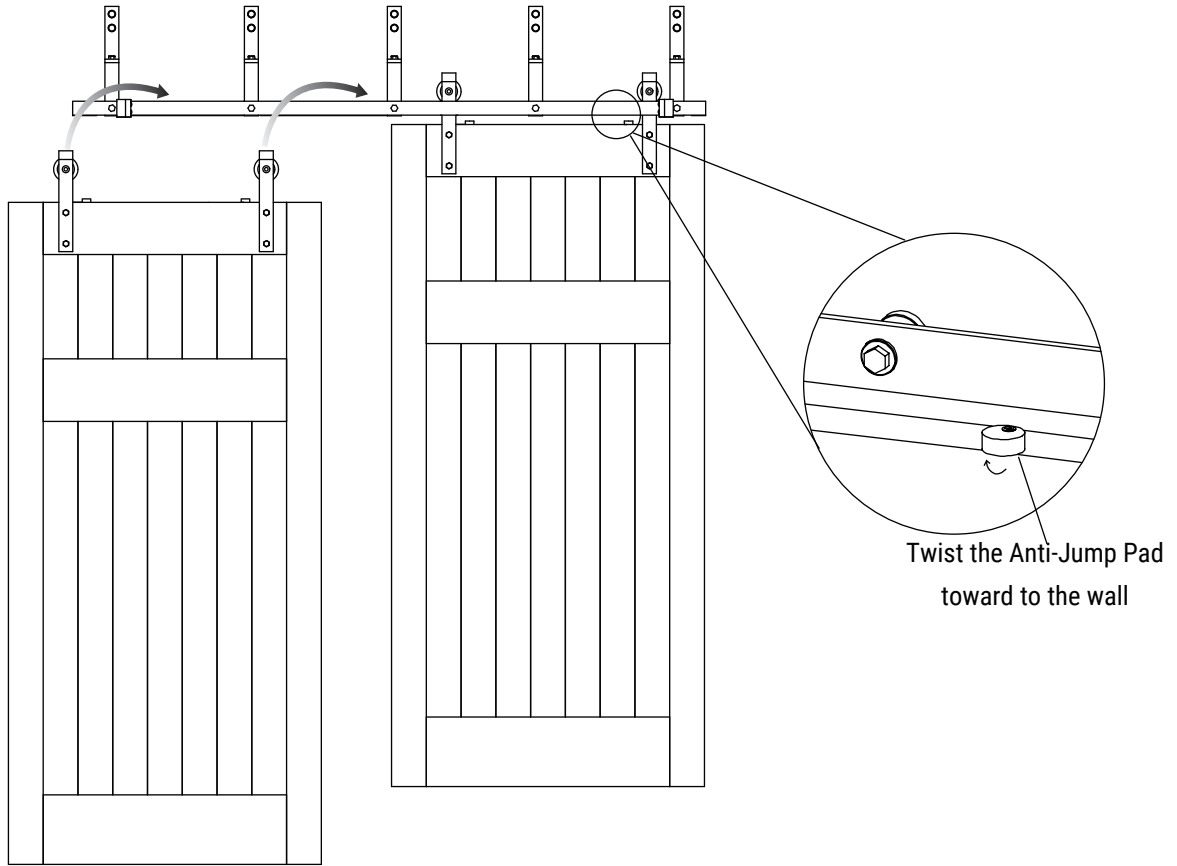


### Step 10: Optional - Install Floor Guide(s)

- Position the door at your desired close position, put half of the floor guide under the door, mark the location, and then fix guide to the floor.
- Position doors in your desired closed and open position and adjust Door Stoppers.

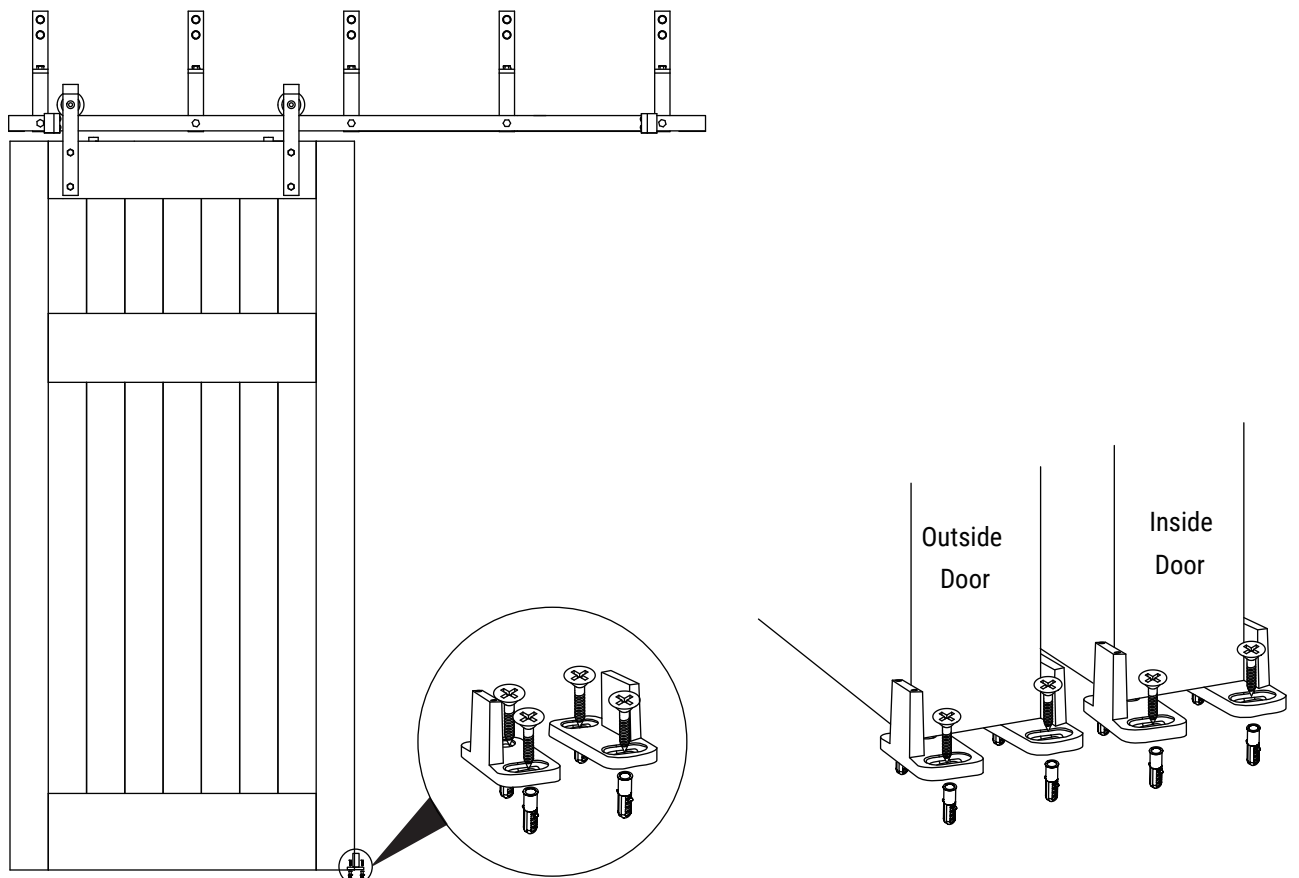

## Step 11: Adjust Door Stoppers

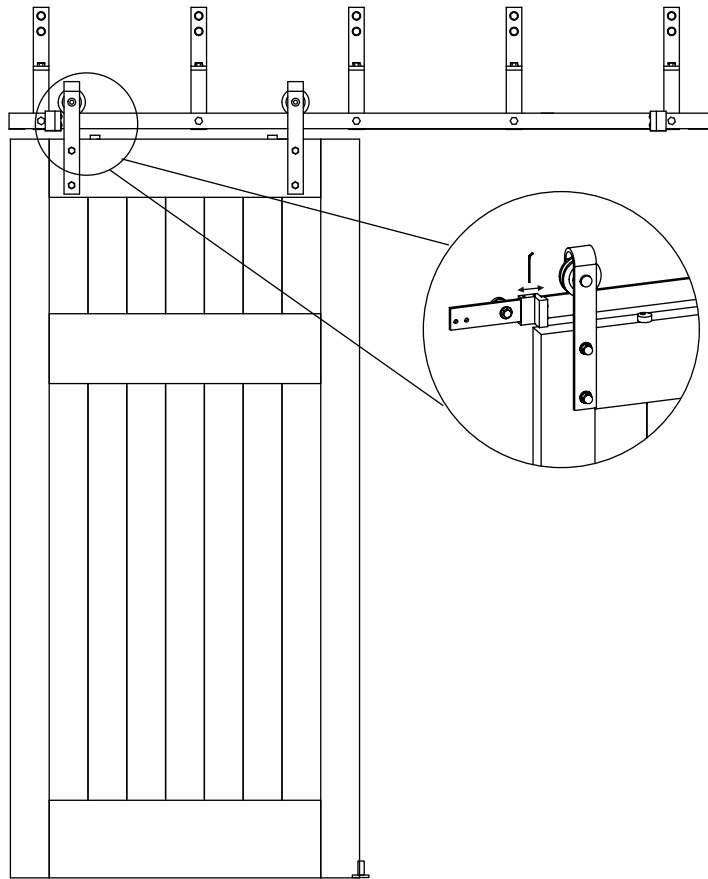

### WARNING

- Failure to wear proper safety gear (i.e., eye protection) may result in serious injury or death. Always wear proper safety gear before using power tools.
- Improper operation of power tools may result in loss of control, serious injury or death. Always ensure you have complete control of the power tool and the work area is free of hazards before operating a power tool.
- Lack of secure clamping of the door may result in unexpected movement of the door, loss of power tool control and serious injury or death. Always securely clamp the door in place before cutting, or drilling, the door.
- Lack of, or improperly installed tracks, wheeled hanger/roller assemblies or floor guides may result in the door coming out of the track and cause serious injury or death.



### CAUTION

- Mishandling of heavy objects (i.e., doors) may cause a loss of balance and serious injury. Always be sure you have a secure hold on the object and are balanced before moving the object. Always wear safety shoes when lifting heavy objects.
- Getting body parts (i.e., hair, fingers) caught in moving parts may cause pinching and serious injury. Do not put fingers in parts that may move and always remove or contain anything on your body that may become entangled with a moving part.
- Closing bypass/sliding doors with your hand on the end of the door may result in your hand, or fingers, getting caught between the door and other solid objects (i.e., another door, molding) causing serious injury. Always use a door handle to close doors.

### Usage Statement:

Use of excessive force when opening, and closing, the door(s) may result in damage to the hardware.



\* For more information visit the DDW website at: [www.doubledw.com](http://www.doubledw.com) or call 716.202.8560  
Specifications are subject to change. Confirm with Dalmatian Doors and Woodworking before ordering.